




Efcolor Enamelling Stove Shield

520 x 126mm Piece of Perspex

Holes 8 mm dia.

Centres to be 40mm from the bottom edge and 130mm, 260mm, 390mm from one side

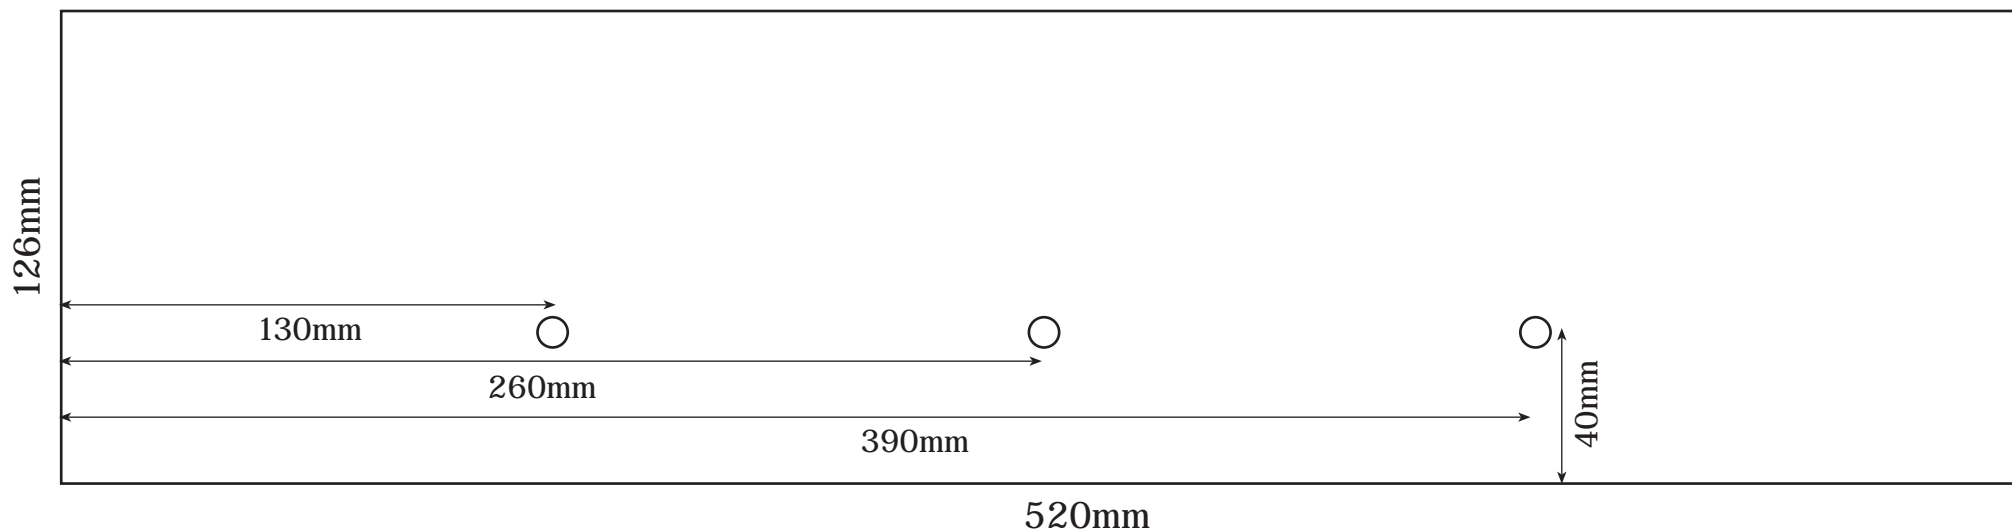

Scale 1:2

Cut the perspex and drill the holes first.

Then bend the perspex to a diameter of approx. 220mm.

Do this by laying it across a section of drain pipe whilst pouring boiling water over it to shape it and then cold water to set it.